

Instructions for mounting a pcProx® or AIR ID® Reader to the Heavy Base accessory

The heavy base gives all pcProx and AIR ID desktop readers a non-slip solid base for desktop use or use on other flat surfaces. Its metal base can be securely mounted with screws (not supplied) for additional placement options.



Kit Contents*

- 1 - Heavy Base
- 2 - #M3X12 Screws
- 1 - Adhesive backed rubber pad
- 4 - Caps (2 keyed, 2 non-keyed)


*KT-ANGLE Kit Sold Separately

Important:

To mount entire reader/base combination to surface, 2 #6 screws (not supplied) will be needed, depending on surface material.

1 Mount Reader to Bracket

Using supplied screws, securely fasten pcProx or AIR ID desktop reader to the metal bracket by threading the screws through the matching holes on the back of the reader as show. Mount the reader vertically as shown below. Be sure not to overtighten screws.

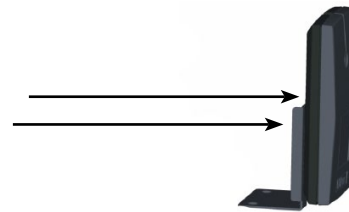

2 Securely Insert Bracket Into Slot on Top of Base

Slide metal tab on bracket into slot on base, apply pressure until bracket snaps into base. Press small non-keyed caps into base on top flat area.



3 See Reverse Number 2 and 3 to Complete Installation



Please contact us if you have any questions.